



www.grandfirebbqs.com.au

## GrandFire Grill Sear Burner change Instructions

**Sear Burner Change out Kits for GrandFire Models:  
GF26, GF32LB, GF38LB, GFD30LB & GFD42LB**

Sear Burner Orifice for **Classic** Models

GF26, GF32LB & GF38LB:


LP Model--- $\Phi$ 1.05mm



NG Model--- $\Phi$ 1.78mm



Sear Burner x 1 pcs

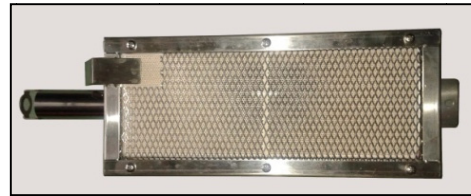

Sear Burner Orifice for **Deluxe** Models:

GFD30LB & GFD42LB

LP Model--- $\Phi$ 1.30mm



NG Model--- $\Phi$ 2.2mm



Sear Grate x 1 pcs



Glass Shield x 1 pcs



### TOOLS NEEDED:

6mm box wrench (6mm) x 1 pcs

Small Straight Screwdriver x 1 pcs

Crosshead Screwdriver x 1pcs

## SEAR BURNER CHANGE INSTRUCTIONS

### 1: REMOVE TUBE BURNER

Remove top grate & burner cover above tube burner. Unscrew the secure nut and take burner out.



### 2: REMOVE CROSS FIRE

Remove the crossfire beside this burner as shown.



### 3: CHANGE INJECTOR

Locate injector. Use a 6mm box wrench to loosen the injector GENTLY!



### 4: CHANGE INJECTOR

Install sear burner injector GENTLY! DO NOT over tighten! DOUBLE CHECK for NG or LP!



### 5: INSTALL SEAR BURNER

Put sear burner in position and tighten the nut at the back.




### 6: SET GLASS & GRATE

Put glass shield and sear grate above sear burner.



### 7: FIRE TEST\*

Light sear burner and keep burning for 5 minutes. All ceramic tiles should burn evenly.

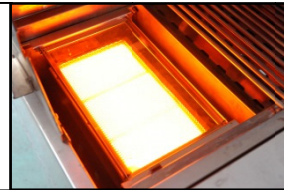

### 8: LOW FLAME SETTING\*

Turn knob down to low position. Adjust low setting screw, make it burning steady for 5 minutes.



\*Please refer to your user manual for detail procedures of Fire Test and Low Flame Setting!